

Dear user of Walkstool,

Things to be aware of when replacing the center piece (metal part):

- The center piece is being turned 180 degrees in the plastic joints to lock.
- This means that at least two of the plastic joints need to be removed from Walkstool to be able to remove the center piece and attach a new one.

We advise you to do the following when replacing the center piece on Walkstool:


- Remove the lower legs completely from Walkstool (when in locked position, push the red spring and pull out the lower legs).
- Remove two plastic joints from the upper legs without damaging the aluminum tubes.
- Remove the center piece and the two plastic joints from the plastic joint that is still attached to Walkstool.
- Attach the new center piece with two new plastic joints and after that to the third plastic joint on Walkstool (remember that all plastic joints need to be locked to the center piece by turning 180 degrees).
- Use a rubber hammer to attach the two plastic joints on the upper legs. On every stroke, pay extra attention that the plastic joint is in a straight position when attaching it to the upper leg.
- Insert each lower leg into the upper legs by pushing both sides of the red plastic spring.

Best regards, Scandinavian Touch AB





Comfort models

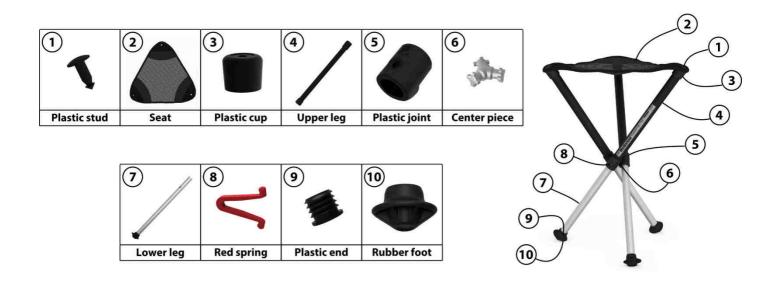

Walkstool

Basic models

